
1/2HP CAST IRON TRANSFER PUMP

MODEL FX501

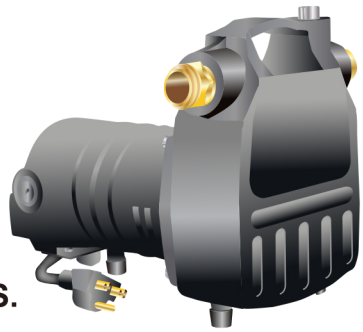


QUICK REFERENCE GUIDE.
SEE INSTRUCTION MANUAL FOR COMPLETE DETAILS.


WARNING:
FOR YOUR PROTECTION, ALWAYS DISCONNECT PUMP FROM POWER SOURCE BEFORE HANDLING.

1. Attach suction hose (not provided) to pump. Make sure inlet connection is air tight.

⚠ IMPORTANT Regular garden hose will collapse under suction conditions and should not be used in the inlet, except for pressure boosting installations.

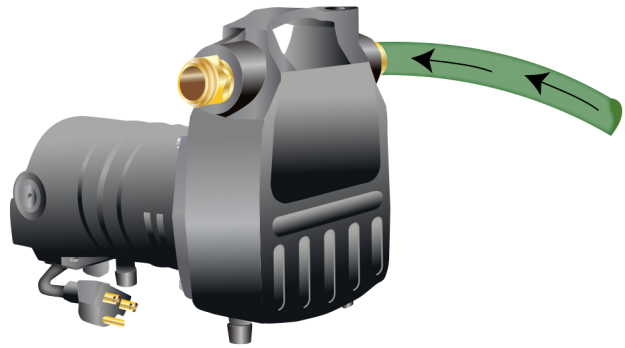


2. Attach discharge hose to pump outlet. A standard 3/4" garden hose may be used as a discharge line.
   Keep the total length as short as possible to prevent excessive friction loss.

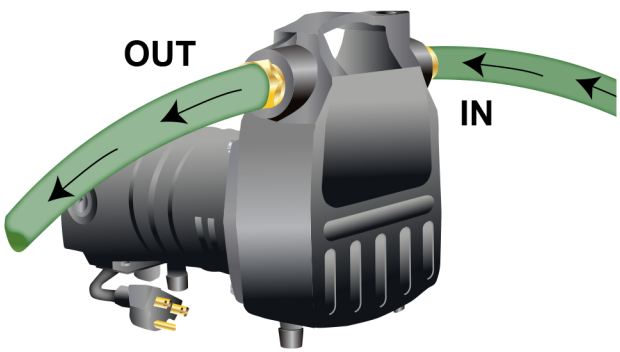


3. Remove priming plug and fill pump housing with clean water. Reinstall plug.

DO NOT RUN DRY.

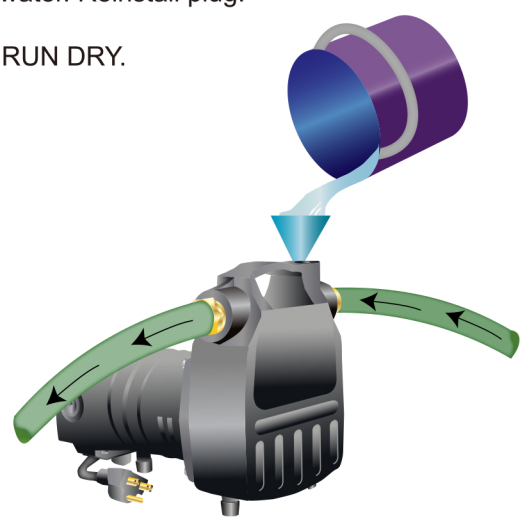

4. Plug in power cord to grounded outlet. Pump will prime in a few minutes, depending on suction line length.

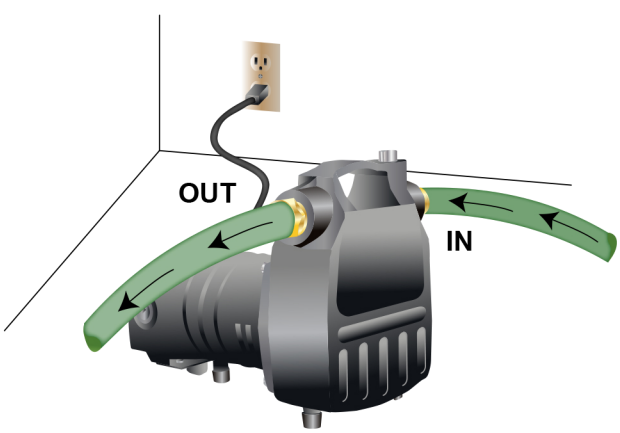

⚠ IMPORTANT To avoid internal pump damage, if after five minutes the pump has not begun pumping water, turn off the pump, remove priming plug, re-fill pump with water, reinstall priming plug and plug pump back in.

